

JOHOR (Headquarter) :
JUBIN BMS (1990) SDN. BHD.
No.6, Jalan Kencana Emas 2/1,
Kawasan Perindustrian Tebrau III,
81100 Johor Bahru,
Johor, Malaysia.

KOTA DAMANSARA :
No.13, Jalan TSB 8,
Taman Industri Sungai Buloh,
Kota Damansara, 47000
Petaling Jaya, Selangor

KEPONG,KL :
No. 03, Jalan 6/37A,
Taman Bukit Maluri,
52100 Kepong, Kuala Lumpur

exclusive distributed by :



SPC STANDARD

4MM + 0.3MM WEAR LAYER

184 X 1220 MM



FIKA BEIGE



FIKA MALT



FIKA BROWN




NORDIC GREY



SPC PRO

6MM + 0.5MM WEAR LAYER + IXPE

184 X 1220 MM



NORDIC GREY



LUCA TEAK



NORDIC CREMA



FIKA MALT



NORDIC LATTE




ESPC

5MM + 0.5MM WEAR LAYER + STABILISER + IXPE

305 X 610 MM



BROOKLYN DARK

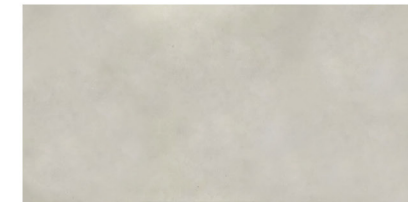

BROOKLYN LIGHT



Made with 100% virgin material from SCG petrochemical and stone powder sources.



Premium Quality
Manufactured in Thailand.



Complete color-matching accessories: Stair tread, riser, nosing, skirting and handrail.



Enhanced durability with water cooling system for added stability.



SPC

4MM + 0.3MM WEAR LAYER

180 X 1220 MM



LITTLE OAK



LOGAN OAK



LUMBER OAK



LYCAN OAK



SPC

BRELIFE

4 COLORS
AVAILABLE



LITTLE OAK



LOGAN OAK




LUMBER OAK




LYCAN OAK

FULL SOLUTION ACCESSORIES

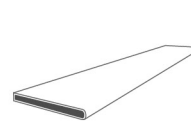


WCB STAIR TREAD
24 X 300 X 1200 MM

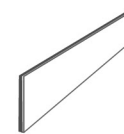


RISER
15 X 200 X 1200 MM



WCB STAIR NOSING
24 X 125 X 1200 MM



HANDRAIL
28 X 70 X 2400 MM



SPC
180 X 1220 MM



SPC STAIR NOSE & TREAD

ROUND STAIR NOSE



FIKA MALT ROUND (5MM)
1300 X 110 X 25 MM



FIKA MALT ROUND (7MM)
1300 X 113 X 25 MM

ROUND STAIR TREAD



FIKA MALT ROUND (7MM) +
SELF ADHESIVE
1300 X 300 X 24 MM

S-LVT

6MM + 0.5MM WEAR LAYER + IXPE

184 X 1220 MM



MYSA GREY



LUCA TEAK



MYSA IVORY



MYSA OAK



•  Silent

•  Supple

•  Soft

DELUXE SKIRTING FOR LIVING & ROOM

AFFORDABLE PRICE
ELEGANT DESIGN
DURABLE
EASY & FAST INSTALLATION

easy to install waterproof widely used high density scratch-resistant multi-colors

17(W) x 75(H) x 2440(L) MM



CLASSIC MAPLE 2832



DARK OAK 21202



DARK WALNUT A226




OAK 38




WENGE 37




BLACK B903

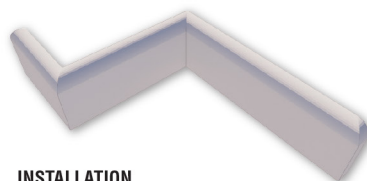


INSTALLATION



Apply silicone equally to the skirting.



Clean the wall surface to make sure it's flat before you place the skirting. Press tightly until it sticks to the wall.



use silicone to cover the top and touch-up the joint with a colour pen.

13(W) x 60(H) x 2440(L) MM



DSS6007
TIVOLI
JF112-C80171



DSS6008
ARMANI
JF112-60634



DSS6009
VENATO
JF112-C8038A



DWS6001
WHITE
JF112-43068



DWS6002
BEIGE
JF112-C61050



DWS6003
GREY
JF112-D04102-S12



DWS6004
COFFEE
JF112-C68031



DWS6005
MIDBROWN
JF112-C61155



DWS6006
BLACK
JF112-C61124



DWS6007
WOOD TEXTURE
CHESTNUT



DWS6008
WOOD TEXTURE
DARK BROWN