



SPC STANDARD

4MM + 0.3MM WEAR LAYER

184 X 1220 MM



FIKA BEIGE



FIKA MALT



FIKA BROWN



NORDIC GREY



SPC PRO

6MM + 0.5MM WEAR LAYER + IXPE

184 X 1220 MM



NORDIC GREY



LUCA TEAK



NORDIC CREMA



FIKA MALT



NORDIC LATTE




ESPC

5MM + 0.5MM WEAR LAYER + STABILISER + IXPE

305 X 610 MM



BROOKLYN DARK

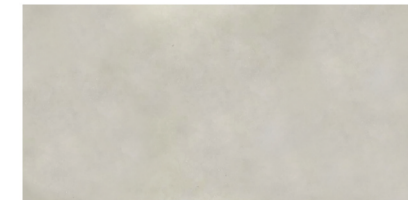

BROOKLYN LIGHT



Made with 100% virgin material from SCG petrochemical and stone powder sources.



Premium Quality
Manufactured in Thailand.



Complete color-matching accessories: Stair tread, riser, nosing, skirting and handrail.



Enhanced durability with water cooling system for added stability.



SPC

4MM + 0.3MM WEAR LAYER

180 X 1220 MM



LITTLE OAK



LOGAN OAK



LUMBER OAK



LYCAN OAK



SPC

BRELIFE

4 COLORS
AVAILABLE



LITTLE OAK



LOGAN OAK




LUMBER OAK




LYCAN OAK

FULL SOLUTION ACCESSORIES

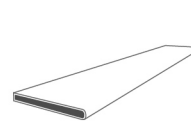


WCB STAIR TREAD
24 X 300 X 1200 MM

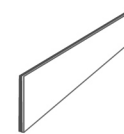


RISER
15 X 200 X 1200 MM



WCB STAIR NOSING
24 X 125 X 1200 MM



HANDRAIL
28 X 70 X 2400 MM



SPC
180 X 1220 MM



SPC STAIR NOSE & TREAD

ROUND STAIR NOSE


1300 X 110 X 25 MM (5MM)



FIKA MALT



FIKA BEIGE

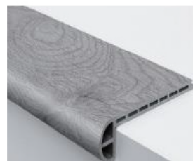

NORDIC GREY

1300 X 113 X 25 MM (7MM)



FIKA MALT



LUCA TEAK



NORDIC LATTE

ROUND STAIR TREAD

1300 X 300 X 24 MM (7MM)



FIKA MALT + SELF ADHESIVE

S-LVT

6MM + 0.5MM WEAR LAYER + IXPE

184 X 1220 MM



MYSA GREY




LUCA TEAK



MYSA IVORY



MYSA OAK

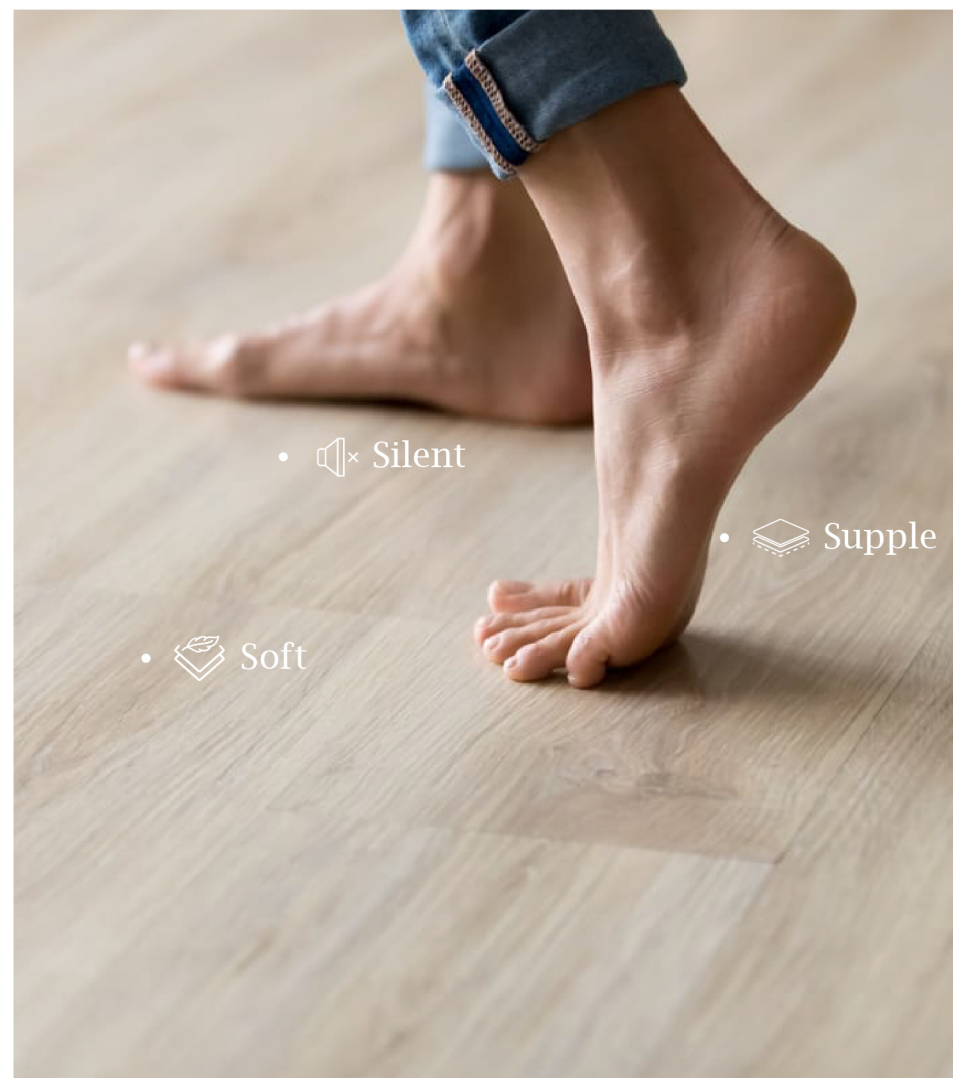

•  Silent

•  Supple

•  Soft

PVC L PROFILE (BIG)

30 x 20 x 2700 MM



DBL 3010 MAPLE



DBL 3012 MALT



DBL 3020 DARK OAK



DBL 3030 WALNUT

PVC REDUCER

30 x 20 x 2700 MM



2710 MAPLE



2712 MALT



2720 DARK OAK



2730 WALNUT

DELUXE SKIRTING FOR LIVING & ROOM

AFFORDABLE PRICE
ELEGANT DESIGN
DURABLE
EASY & FAST INSTALLATION

easy to install waterproof widely used high density scratch-resistant multi-colors

95 x 15 x 2440 MM & 70 x 15 x 2440 MM



D9510 MAPLE




D9512 MALT



D9520 DARK OAK




D9530 WALNUT

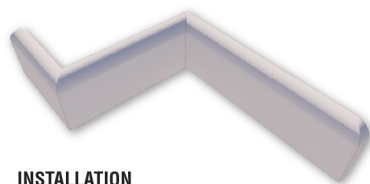


INSTALLATION



Apply silicone equally to the skirting.



Clean the wall surface to make sure it's flat before you place the skirting. Press tightly until it sticks to the wall.



use silicon to cover the top and touch-up the joint with a colour pen.

13(W) x 60(H) x 2440(L) MM



DSS6007
TIVOLI
JF112-C80171



DSS6008
ARMANI
JF112-60634



DSS6009
VENATO
JF112-C8038A



DWS6001
WHITE
JF112-43068



DWS6002
BEIGE
JF112-C61050



DWS6003
GREY
JF112-D04102-S12



DWS6004
COFFEE
JF112-C68031



DWS6005
MIDBROWN
JF112-C61155



DWS6006
BLACK
JF112-C61124



DWS6007
WOOD TEXTURE
CHESTNUT



DWS6008
WOOD TEXTURE
DARK BROWN

JOHOR (Headquarter) :
JUBIN BMS (1990) SDN. BHD.

No.6, Jalan Kencana Emas 2/1,
Kawasan Perindustrian Tebrau III,
81100 Johor Bahru,
Johor, Malaysia.

KOTA DAMANSARA :

No.13, Jalan TSB 8,
Taman Industri Sungai Buloh,
Kota Damansara, 47000
Petaling Jaya, Selangor

KEPONG,KL :

No. 03, Jalan 6/37A,
Taman Bukit Maluri,
52100 Kepong, Kuala Lumpur

exclusive distributed by :



JUBIN BMS®
寶馬磚業